




1) Here you can see the 3 parts to the slim tools. They are lettered A, B and C on the picture above.

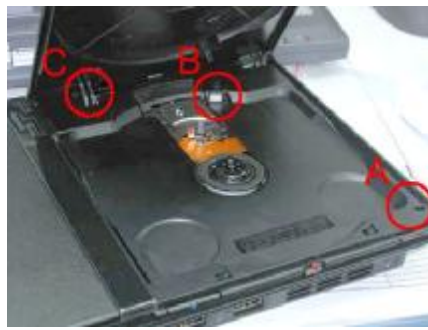

2) On the picture above you can see the console front view opened. Here you can see where each tool takes its place.



3) Take the Tool A and stick it in the place on the picture above.



4) Now its time to set the Tool B. Please move the disk break to the right and hold it.



5) Then, please insert the Tool B in the place on the picture above.



8) On the left hand side you can see the position for Tool C. Please put Tool C next to the gap. And then push it till it goes no further downwards. As a result your console is ready for playing your imports.